



STEAM BLASTER *Jr.*

OWNER'S MANUAL

Model S3200

120V., 60Hz, 1000 Watts



USA: EURO-PRO Operating LLC

94 Main Mill Street, Door 16

Plattsburgh, NY 12901

Tel.: 1 (800) 798-7398

www.sharkcompany.com

Canada: EURO-PRO Operating LLC

4400 Bois Franc

St. Laurent, QC H4S 1A7

EURO-PRO 

Model
S3200



1 YEAR LIMITED WARRANTY

Your Steam Cleaner is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use by the original purchaser only. The included Warranty Registration Card must be filled out and returned within 10 days of purchase. This is essential for your Warranty to be effective should any problem arise with this product.

Should any defect covered by the terms of the limited warranty be discovered within one year, **EURO-PRO Operating LLC** will repair or replace any defective part provided the unit is returned by the original purchaser, freight prepaid, to:

U.S.: **EURO-PRO Operating LLC**, 94 Main Mill Street, Door 16, Plattsburgh, N.Y., 12901

Canada: **EURO-PRO Operating LLC**, 4400 Bois Franc, St Laurent, QC H9S 1A7

Proof of purchase date and \$16.95 for handling and return packing/shipping charges must be included.*

The liability of under this warranty is limited solely to the cost of the replacement parts or the complete unit at our option. LABOUR CHARGES ARE NOT INCLUDED.

This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This Limited Warranty does not cover damage caused by misuse, negligent handling, or damage due to faulty packaging or mishandling in transit (by any common carrier).

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of **EURO-PRO Operating LLC**, if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. In no event is **EURO-PRO Operating LLC** liable for incidental or consequential damages of any nature whatsoever. Some States/Provinces do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights which vary from state to state or province to province.

*Important: Carefully pack item to avoid damage in shipping. Be sure to attach tag to item before packing with your name, complete address and phone number with note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". **We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**



OWNERSHIP REGISTRATION CARD FOR CANADIAN CONSUMERS ONLY

Please fill out and mail the product registration card within ten (10) days of purchase. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

RETURN TO: **EURO-PRO Operating LLC**, 4400 Bois Franc, St Laurent, Qc., H4S 1A7

Model S3200

Appliance model

Date purchased

Name of store

Owner's name

Address

City

Province

Postal Code

TIPS ON HOW TO USE YOUR SYSTEM

ALWAYS FINISH CLEANING BY WIPING DOWN THE CLEANED SURFACE WITH A TOWEL

Refrigerator - Use the concentrator to blow away dirt in the ice machine and on door seals. The vapor will not dry out or crack the seals as chemicals often do. Can openers and other kitchen equipment can be easily cleaned with the bristle brush to get into all the nooks and crannies. Mold stains around door gaskets can be removed with the bristle brush.

To clean **microwaves** or **other small appliances** use the nylon bristle brush for small areas.

Note: When cleaning small electrical appliances always unplug them from outlet before cleaning. **Do not** direct steam into any openings of the appliances.

To clean **counter tops**, use the bristle brush first in order to loosen the debris, then wipe with a terry cloth towel to finish.

Hints

The steam cleaner has many uses that have not been mentioned. This was meant only to give you a general idea of what can be achieved with the unit. However, the ways in which to use the attachments and brushes are in most cases universal. It is **most** helpful to always have a terry cloth towel or paper towel ready to use for removal of moisture and residue. 100% white cotton towels work best.

You can clean the brushes with your steam cleaner. When cleaning the bristle brushes, use a pair of pliers to hold and blow dirt as above or place in the basket of your dishwasher.

Note: Wipe with a towel immediately before the cleaned area dries. When cleaning the oven, use the bristle brush to clean around the elements and drip trays. Use the bristle brush for cracks, crevices, and hard to reach areas.

ORDERING SUPPLIES

If you need to order supplies such as Steam Pocket™ towels, etc. please call the customer service number at 1 (800) 798-7398.

IMPORTANT SAFETY INSTRUCTIONS

When using your **Steam Cleaner**, basic safety precautions should always be observed, including the following:

1. Read all instructions before using your steam cleaner.
2. Use the system only for its intended use.
3. To protect against a risk of electric shock, **do not** immerse any part of the system in water or other liquids.
4. **Never** yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. **Do not** allow cord to touch hot surfaces. Let the system cool completely before putting away or opening water tank (removing the safety cap).
6. Always disconnect system from electrical outlet when filling with water or emptying and when not in use. Always turn the safety cap slowly when opening the water tank. This will allow any remaining steam to escape gradually.
7. **Do not** operate the system with a damaged cord or plug, or if the appliance or any other part of the system has been dropped or damaged. To avoid the risk of electric shock, **do not** disassemble or attempt to repair the steam cleaner. Return the system to **EURO-PRO Operating LLC** (see warranty) for examination and repair. Incorrect re-assembly or repair can cause a risk of electrical shock or injury to persons when the steam cleaner is used.
8. Close attention is required when this appliance is used near children or pets. **Do not** leave the system unattended while connected to electrical outlet or when hot.
9. Burns can occur from touching hot metal parts, hot water or steam. Use caution when draining unit after use as there may be hot water in the unit. Never direct steam at any person. The steam is very hot and can cause burns.
10. **Do not** operate in the presence of explosive and/or flammable fumes.
11. This appliance is intended only for household use. Follow all user instructions in this manual.
12. Never use any chemicals or substance other than tap water in the machine. Use of chemicals may damage the machine. Use of chemicals will automatically void your warranty.

To reduce the risk of fire, electric shock, or injury:


- **Do not** leave the steam cleaner plugged in when unattended. Unplug the electrical cord when not in use and before servicing or refilling water tank.
- **Do not** allow to be used as a toy. Close attention is necessary when used near children, pets or plants.
- Use only as described in this manual. Use only manufacturer's recommended accessories.
- **Do not** pull cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- **Do not** use extension cords or outlets with inadequate current carrying capacity.
- **Do not** unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- **Do not** handle plug or steam cleaner with wet hands or operate without shoes.
- **Do not** put any objects into openings. **Do not** use with any opening blocked.
- **ALWAYS STORE YOUR APPLIANCE INDOORS** in a cool, dry area.
- **Do** keep your work area well lit.
- **Do not turn the appliance over or on its side. Never direct steam towards people, animals or plants.**
- **Do not** immerse the steam cleaner into water or other liquids. Always unplug the power cord from the electrical socket when filling the steam cleaner.
- **Do NOT add cleaning solutions, scented perfumes, oils or any other chemicals to the water used in this appliance as this may damage the unit or make it unsafe for use.** Use tap water or distilled/purified water if the tap water in your area is very hard.


SAVE THESE INSTRUCTIONS


For Household Use Only

ADDITIONAL IMPORTANT SAFEGUARDS

1. To avoid circuit overload, **do not** operate another appliance on the same socket (circuit) as the steam cleaner.
2. If an extension cord is absolutely necessary, an extension cord rated a minimum of 15 ampere, 14 gauge cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange cord so that it cannot be pulled or tripped over.
3. **Do not** leave unattended when the system is connected to a power supply/electrical outlet.

 **WARNING:** This appliance is equipped with a grounded, type 3-wire cord (3-prong plug). This plug will only fit into an electrical outlet made for a 3-prong plug. This is a safety feature. If the plug should fail to fit the outlet, contact an electrician to replace the outlet. Do not attempt to defeat the safety purpose of the grounding pin, part of the 3-prong plug.

 **CAUTION:** Always drain condensed water from hose or concentrator nozzle before use or if unit has been left idle for a period of time. To drain hose, direct nozzle into an appropriate container or sink and depress locking steam trigger. Once hose has been drained, normal use may be resumed. Never direct nozzle towards people, animals or plants.

 **WARNING:** Your Steam Cleaner is designed to clean hard surfaces and upholstery that will withstand high heat. Do not use on soft plastics and cold glass. On surfaces that have been treated with wax or some no wax floors, the sheen may be removed by the heat and steam action. Do not use on unsealed wood. This could cause the wood grain to rise. It is therefore recommended to test an isolated area of the surface to be cleaned before proceeding.

IMPORTANT: Do **NOT** add cleaning solutions, scented perfumes, oils or any other chemicals to the water used in this appliance. Use regular water or distilled/purified water if the tap water in your area is very hard.

 **WARNING:** Danger of Scalding. Please use caution when using the steam cleaner. The steam emitted is very hot.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

TIPS ON HOW TO USE YOUR SYSTEM

Fiberglass or Stainless Steel Surfaces

Use the bristle brush. Slowly move the brush over the surface to be cleaned. The vapor will emulsify the dirt and grease on the surface. Follow behind with a terry cloth towel over the brush to remove excess moisture and residue.

Tip: An old idea for polishing stainless steel is to wipe it down with seltzer soda water after it is cleaned.

Bathroom Areas

To clean the bathtub or shower area, use the bristle brush for grout, shower door tracks, hard to get areas and heavily soiled areas. The window squeegee attachment will be the most efficient way to clean the rest of the area. Allow plenty of time for the heat to penetrate the surface. This is especially helpful in the shower area if there is tile or grout. Wipe with towel.

Removal of soap scum on tile, grout, and shower doors is also easier with the steam cleaner.

To clean sanitary fixtures, use the concentrator with or without bristle brush. Use a terry cloth towel or paper towel to wipe up excess moisture and residue.

To clean the sink and faucets, use bristle brush then finish by wiping with a towel.

Soap Scum

Soap scum dissolves almost immediately under a combination of heat and moisture. Rinse the surface with a small amount of water afterwards or go back over it once more with a clean terry cloth towel.

Note: Soap scum sometimes will develop a hard surface from waterborne minerals. If this is the case, use the bristle brush to break up this surface - or spray or wipe first with lemon, vinegar or seltzer soda water to soften the minerals. Moving too slowly can dry out the soap scum and cause it to granulate on the surface. The surface will have a gritty feel. If this happens, apply vapor to the surface with the bristle brush again and re-clean.

Garden Furniture

Use the brushes depending on the surface area. Work quickly when cleaning resin outdoor furniture. Finish by wiping with a towel.

Blinds

Use the nylon bristle brush to clean blinds. Move the brush over the surface, allowing enough time for the vapor to penetrate. Work quickly on PVC blinds. Test for color fastness on fabric blinds before using. Finish by wiping with a towel.

Automotive

For detailing the wheels, use the concentrator and the bristle brush. Exterior windows are cleaned best by applying the steam with the concentrator and following with a paper towel.

To clean bicycles, use the bristle brush. To clean equipment, use the bristle brush, depending on the surface area. Finish by wiping down with a towel.

Artificial Plants

Use the concentrator without a brush attached to blow off the dust and dirt.

Clothing

A vapor cleaning system is excellent for removing wrinkles from fabrics. Simply "vaporize" the surface from a distance (12"-18") The dry vapor removes wrinkles without leaving the fabric wet like ordinary fabric steamers do.

Nicotine and Tar

Nicotine and tar dissolves at high temperatures and becomes a light yellow oil that has the consistency of sewing machine oil. When the nicotine/tar film is touched by the Steam Pocket™, it immediately dissolves and flows into the Steam Pocket™ towel. You can remove it from flat surfaces as fast as you can move the Steam Pocket™ over the surface.

Removing Wax, Tar, Etc.

Many stains are only stuck on the surface of materials and can be easily and quickly removed by "blowing" excess material away from the surface from the side. This is accomplished by using the concentrator. Hold the terry cloth towel to the side to catch the loose residue as it is blown by the concentrator. **Note:** Always vacuum any loose residue off the surface before you apply vapor to it.

TIPS ON HOW TO USE YOUR SYSTEM

Wood, Vinyl and Marble Floors

Use the Steam Pocket™ to clean wood, vinyl and marble floors. Move the Steam Pocket™ across the floor as if you are mopping. When one side of the towel is soiled, turn the Steam Pocket™ frame and use the other side. One of the great advantages of using our Steam Pocket™ is that your floor will dry faster than if you used a mop or other floor cleaning device. It is normal that some moisture may be left behind depending on how quickly you move the Steam Pocket™ across the floor and the relative heat and humidity of the room. Be sure to move quickly and steadily over wood, linoleum and vinyl flooring to avoid damaging the surface and removing wax.

To Clean Waxed Floors: Use the Steam Pocket™ with quick strokes. This will cause the dirt to be removed but not the wax.

Vinyl Floors: Do not allow heat to build up in any kind of vinyl since it can soften it enough to affect its texture. Work fast on vinyl.

Tile Floors: Use the concentrator with the bristle brush. Have the Steam Pocket™ ready as well. Clean the grout between the tiles with the bristle brush. Remove the concentrator and bristle brush and attach the hose and Steam Pocket™. Move the Steam Pocket™ across the floor to clean the tile and remove excess moisture and residue.

CAUTION: Always determine the color-fastness of any fabric-especially with reds or blues - by taking a clean, moist, warm towel and gently rubbing a small area as far down on the back or other out of the way place on the furniture as possible. If color comes off on the towel, you may need to have the piece dry cleaned.

Spot Cleaning (Carpets)

Use the concentrator with or without the bristle brush. Move slowly over the soiled area, allowing the steam to penetrate. Agitate with the bristle brush or a clean towel. Dab the spot with the towel (do not rub). Repeat as necessary to remove stain. Vacuum only after the carpet has completely dried.

Always test color fastness of carpet in an inconspicuous area before cleaning. If your steam cleaner fails to remove stubborn stains a commercially available carpet shampoo may be required. **Do NOT** add cleaning solutions, scented perfumes, oils or any other chemicals to the water used in this appliance as this may damage the unit or make it unsafe for use.

CAUTION: When cleaning windows, always avoid any sudden changes in temperature to prevent glass breakage or cracks.

Window, Glass Surfaces and Mirrors

Use the window squeegee attachment. Work with the steam on using the top to bottom movements. Use the squeegee attachment with the steam off to clear the water from the glass. To do this without leaving streaks, use lateral movements from the top to the bottom of the surface.

GETTING TO KNOW YOUR STEAM CLEANER



1. Main Unit
2. Concentrator Nozzle
3. Safety Filler Cap
4. Steam Trigger
5. Steam Trigger Release Button
6. Handle
7. Power Cord
8. Indicator Lights (Red-Power On/Green-Steam Ready)
9. Shoulder Strap
10. Steam Pocket™ Frame

11. Steam Pocket™ Frame Angle Adapter
12. Steam/Garment Diffuser
13. Flexible Hose with Handle
14. Steam Pocket™ Towel
15. Nylon Bristle Brush (x3)
16. Filling Flask
17. Extension Tubes (x2)
18. Angled Concentrator
19. Steam/Garment Diffuser Bonnet
20. Squeegee Attachment
21. Funnel (*Not Illustrated)

Technical Specifications

Voltage:	120V., 60Hz.
Power:	1000 Watts
Water Capacity:	9.5 US fl. oz. (280 ml)

* Illustrations may differ from actual product.

FEATURES OF YOUR STEAM CLEANER

1. Multipurpose Steam Cleaner:

Bathrooms, kitchens, living areas, pet areas and appliances.
Automotive, patio and windows.

2. Lightweight & Portable



3. Steam Pocket™

Wood, vinyl
and tile floors



4. Versatile, quick-change accessories



TIPS ON HOW TO USE YOUR SYSTEM

Care and Maintenance

If you consistently use demineralized or distilled water, cleaning the tank is unnecessary.

Rinsing Out the Steam Cleaner

Normally, a periodic rinse of your steam cleaner will free it from deposits. This is recommended every 10-15 tankfuls, to free up any scale deposits from the tank. Fill the boiler halfway with water and shake the cleaner vigorously. Tilt the cleaner upside down to empty the boiler of water and any scale deposits.

Descaling Your Steam Cleaner

If the tap water in your area contains a high level of calcium deposits and you have been using tap water to do your steam cleaning, you should descale your unit after 10-15 tankfuls.

To Descal the Steam Cleaner

1. Unplug the steam cleaner from the power source before you descale the boiler. Allow the unit to cool completely.
2. Fill the boiler with 1 part vinegar and 5 parts water and leave overnight or for a period of approximately 8 hours. **Do not** screw the safety/filler cap onto the steam cleaner while you are descaling the boiler. **Do not use the steam cleaner while descaling solution is inside the boiler.**
3. After the period of soaking is over, turn the steam cleaner upside down to empty the solution from the boiler. Due to the fact that a small amount of solution will be left in the boiler, it is necessary to rinse the boiler out with clean water 2 or 3 times. Your steam cleaner is now ready for use.

Water

- Use tap water for all your cleaning needs.
- However, if you live in an area with hard water, use de-mineralized / distilled water when steaming light colored fabrics to eliminate the possibility of hard water stains.

IMPORTANT: Do **NOT** add cleaning solutions, scented perfumes, oils or any other chemicals to the water used in this appliance. **Use tap water or distilled/purified water if the tap water in your area is very hard.**

Efficient Work

- For vertical surfaces, wipe with a towel from the top down, in this way the dirty water will not soil surfaces already cleaned.
- Avoid changing brushes back and forth while cleaning.
- Start with the smallest brush to clean tight spots and corners first.
- Use a towel to wipe dirt as soon as possible, otherwise it will dry and re-adhere to the surface.

OPERATING INSTRUCTIONS

Attaching the Shoulder Strap

Using the detachable shoulder strap allows for greater freedom of movement when both hands are needed for various cleaning tasks. To attach the shoulder strap to the steam cleaner, simply snap the shoulder strap hooks onto the connecting rings on the unit body. (Fig. 12)

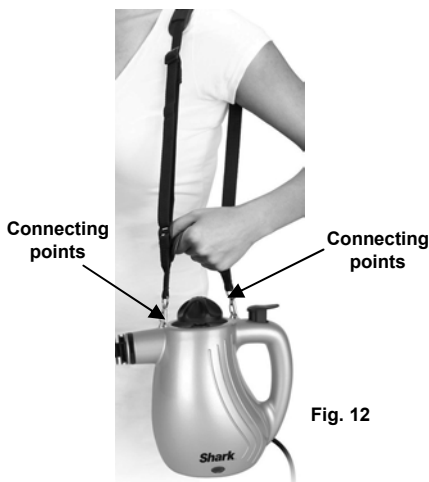 


Fig. 12

IMPORTANT: When using the steam cleaner with the shoulder strap, avoid rocking or tilting the unit excessively as this may cause water to enter the hose and be discharged along with the steam.

Using Your Steam Cleaner

After you have assembled the steam cleaner and are ready to use:

1. When you press the steam trigger it will lock in place and you will have continuous steam.
2. To stop the flow of steam, press the steam trigger release button.
3. When using the unit with the shoulder strap, avoid rocking or tilting the unit excessively as this may cause water to enter the hose and be discharged along with the steam.

OPERATING INSTRUCTIONS

Components

Indicator Lights: The steam cleaner has an indicator light located at the base of the unit that will illuminate when the unit is plugged into the 120V wall outlet.

Red Light: When the red indicator light illuminates, this indicates that the power is "On".

Green Light: When the green indicator light illuminates, the steam is ready.

CAUTION: Read the instructions for "Filling or Refilling Your Steam Cleaner with Water" before opening the safety filler cap.

CAUTION: Always unplug before filling. **ALLOW UNIT TO COOL FOR FIFTEEN (15) MINUTES BEFORE REFILLING.**

IMPORTANT: Do **NOT** add cleaning solutions, scented perfumes, oils or any other chemicals to the boiler in this appliance. **Use tap water or distilled/purified water if the tap water in your area is very hard.**

Filling or Refilling Your Steam Cleaner With Water


IMPORTANT: Always insure that the unit is "UNPLUGGED" from the wall receptacle prior to initial filling or re-filling the water tank and has been allowed to cool. **Never attempt to fill this unit under a water tap, always use the measuring cup and funnel provided.**

1. Before filling or refilling the steam cleaner, make sure that the unit is **NOT** plugged in and has been allowed to cool for fifteen (15) minutes.
2. Press the locking steam trigger on the handle of the unit to vent any residual steam that is in the boiler.
3. Place the unit on a flat, stable surface. Slowly, press and turn the filler cap counter clockwise until it is removed.
4. Place the funnel in the tank opening. (Fig. 1) Fill with a maximum of one filling flask or 9.5 oz (280 ml) of water. **Do Not Overfill.** Turn the safety cap clockwise to replace.

NOTE: To remove or replace the filler cap, push down and rotate it clockwise to tighten or counter clock-wise to loosen.

NOTE: Filling the unit with hot water will shorten the heat up time.

 Fig. 1

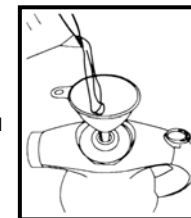

WARNING: Extreme care should be taken when refilling the unit. Allow unit to cool for 15 minutes before refilling. When refilling the steam cleaner while the boiler is still hot, **there is a risk that water will squirt back during filling and cause scalding.** Use caution when opening the filler cap as the cap may become hot during use and escaping steam can cause scalding.

5. To attach the concentrator nozzle or the steam/garment diffuser to the nozzle: align the two pins on the end of the concentrator nozzle or steam/garment diffuser with the notches in the nozzle of the unit. (Fig. 2)

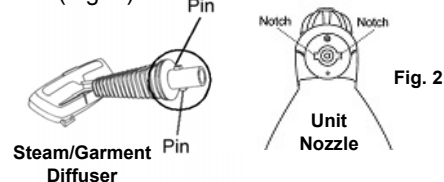 


Fig. 2

6. Push the attachment into the nozzle unit it stops against the unit. Turn clockwise ¼ turn to lock the attachment into place. Allow approximately 5 minutes for vapor to reach its working temperature and pressure. When the unit is ready for use, the green indicator light will illuminate. Always point the nozzle in a safe direction. At the start, some water will come out from the nozzle. This is normal.

NOTE: When the steam cleaner has run out of water, steam output will cease.

CAUTION: This appliance is under pressure. After every use, press steam trigger button until all pressure has been released before removing safety cap. Allow unit to cool for fifteen (15) minutes before refilling.

OPERATING INSTRUCTIONS

Using Your Steam Cleaner with Steam Pocket™

Step 1. Attach one or both of the extension tubes to the hand grip of the flexible hose. To attach the extension tubes one onto the other or onto the hand grip, press the locking button ensuring that it fits into the hole (Fig. 3., Fig. 4) and press the two sections together.



Fig. 3

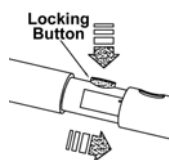 


Fig. 4

Step 2. To attach the flexible hose to the main unit, align the end of the hose with the pins to the notches in the nozzle of the unit. Push the flexible hose into the nozzle until it stops against the unit and rotate 90° until it locks into position. (Fig. 5) To remove the flexible hose, push the flexible hose in, rotate 90° in the opposite direction and pull the flexible hose out.

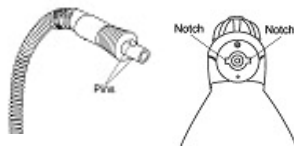 


Fig. 5

Step 3: Attach the steam pocket frame with the angle adapter onto the extension tube.

Note: If the angle adapter is not attached to the steam pocket frame, attach as follows: Hold the steam pocket frame in one hand and the angle adapter in the other. Insert the angle adapter into the opening of the steam pocket frame as shown in Fig. 6.

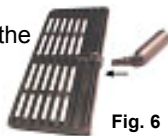 


Fig. 6

Note: The flat end on the angle adapter must face toward the side of the frame with the brass pin. Once inserted, rotate it 90°.

Step 4. Insert the electrical power cord into the outlet. Heating time is approximately 5 minutes with cold water. Filling the steam generator with hot water will shorten the heat up time.

Attaching the Steam Pocket™ Towel to the Frame

WARNING: Always insure the unit is "UNPLUGGED" from the wall receptacle prior to attaching or removing accessories.

1. Slide the Steam Pocket™ towel over the steam pocket frame. (Fig. 7)
2. Bring the towel all the way to the top of the steam pocket frame. (Fig. 8)
3. Bring the velcro strips that are on the back side of the steam pocket™ towel over the steam pocket frame and attach to the inside of the front side of the Steam Pocket™ towel. (Fig. 9)

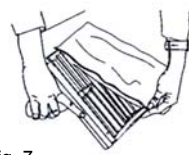 


Fig. 7

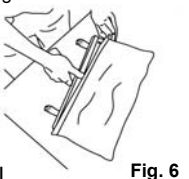 


Fig. 8



Fig. 9

NOTE: If replacing the Steam Pocket™ towel, make sure that the frame has been allowed to cool before removing or attaching a new Steam Pocket™ towel.

Care & Maintenance of the Steam Pocket™ Towel

Due to the unique cleaning ability of this cloth, proper care of your micro-fiber towel is required to ensure long life and continued cleaning ability.

- The first thing you should do when you get a new micro-fiber towel is to wash and dry it. During the manufacturing process the fabric has a tendency to become flat as it picks up contaminants from the air and machinery. There will also be a number of loose threads that, while they cause no harm, can be annoying the first time you use the towel.

OPERATING INSTRUCTIONS

- To clean the towel, simply wash it in your washing machine using the warm water setting.
- Always wash your towels separately from other fabrics. They have a tendency to pick up lint and other particles from other fabrics and the next time you use your towel, this lint will transfer to the surface being cleaned.
- **ONLY USE LIQUID DETERGENTS**, never use dry detergents as many times the granules do not fully dissolve and become trapped in the towel. This can scratch the surface that you are cleaning.
- **NEVER USE BLEACH OR FABRIC SOFTENERS!** Bleach will damage the micro-fiber fabric and fabric softeners deposit a coating on the micro-fiber fabric what will not allow the cloth to clean efficiently.
- Air dry the towel. Do not put in a clothes dryer as high heat will cause the towel to shrink and the micro-fibers to break down.
- If you wash your towel on a regular basis and don't let it get too dirty, it will last much longer. As with any fabric, dirt particles, grease and other contaminants can cause the fibers to break down, therefore regular cleaning will help preserve your micro-fiber towel.
- As you use the micro-fiber towel, you will notice that sometimes a thread will loosen or pull out. This is normal and you should **NEVER PULL AT THE LOOSE THREAD!** Pulling the thread can cause the weave to come undone. Instead, simply trim the thread with a pair of sharp scissors.

CAUTION: Be aware of hand placement and take care not to actuate the steam discharge switch while installing or removing accessories.

Attaching the Accessories to the Steam Unit

Always allow the unit to cool for 15 minutes before changing accessories.

Concentrator Nozzle or Steam/Garment Diffuser

To attach the concentrator nozzle or the steam/garment diffuser to the unit, align the two pins on the end of the concentrator nozzle or the steam/garment diffuser with the notches in the nozzle of the unit.

Steam/Garment Diffuser Bonnet

To use the steam/garment diffuser bonnet try on a hidden area first to test for color fastness see "Spot Cleaning" in the "Tips" section.

To use: Attach the steam garment/diffuser bonnet over the steam/garment diffuser. (Fig. 10)



Fig. 10

Squeegee Attachment

This attachment is very useful for cleaning windows, ceramic, tiled or marble surfaces.

IMPORTANT: When cleaning windows, always avoid any sudden changes in temperature to prevent glass breakage or cracks.

To use: To attach the squeegee attachment to the steam/garment diffuser, place the two hinges at the back of the squeegee attachment into the two open tabs that are at the back of the steam/garment diffuser. (Fig. 11)

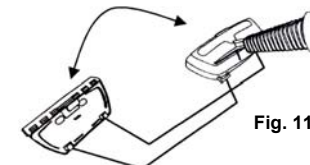 


Fig. 11

Swing the squeegee attachment up against the bottom of the steam/garment diffuser until the locking tab engages. To remove the squeegee attachment, just push your thumb against the locking tab to release.

Angled Concentrator

Use the extended concentrator to clean under toilet rims and hard to reach places.

To use: To attach the angled concentrator to the concentrator nozzle push on and turn to lock.

Nylon Bristle Brush (x3)

It is best for cleaning grout in-between the tiles, ceramic and marble.

To use: To attach the nylon bristle brush to the concentrator nozzle push on and turn to lock.

